






FITTING INSTRUCTIONS FOR STANDARD TOP FIXING PANS – THIS TYPE OF PAN IS WHERE ONE HAS NO ACCESS TO THE FIXING BOLTS UNDERNEATH THE PAN AND CAN ONLY TIGHTEN AND FIX THE SEAT FROM THE TOP OF THE PAN.

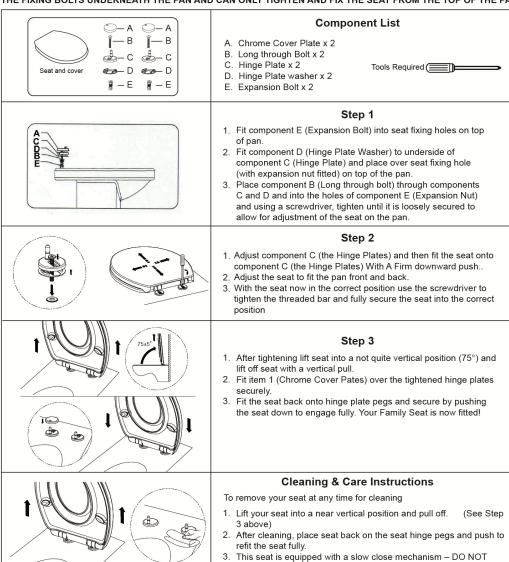

CLEANING INSTRUCTIONS

FORCE DOWN

Only use clean soapy water. The seat can be steam cleaned.

Do not use abrasive cleaning products or products containing chlorine or acids, as these may cause yellowing or peeling of the material.

Use ONLY a mild detergent/non-abrasive household cleaner or neutral soap or natural household cleaning products, which are best for effective, problem-free cleaning. Do not use bleach or any products containing bleach on the seat. Do not mix cleaning products as this can cause a reaction. After cleaning, ensure the chrome hinge is dried. Leave the seat and lid up whenever strong cleaning products (such as bleach) are left in the pan bowl to prevent damage to the seat from the vapours.







FITTING INSTRUCTIONS FOR STANDARD BOTTOM FIXING PANS – WHERE ONE TIGTENS THE SEAT FROM THE UNDERSIDE OF THE PAN.

Component List Ĩ — B j̇̃ — B A. Chrome Cover Plate x 2 B. Long through Bolt x 2 _c 🕹 _c C. Hinge Plate x 2 € - D € - D Tools Required D. Hinge Plate washer x 2 Seat and cover ◎ - E ◎ - E E. Rubber coated Washer x 2 *∞* − F *∞* − F F. Tightening Wing-Nut x 2 Step 1 Fit component D (Hinge Plate Washer) to underside of component C (Hinge Plate). Place component C (Hinge Plates) over seat fixing holes on top of the pan. 3. Insert component B (long bolt) through components C & D and into the pan seat fixing holes. 4. Slide component E (Rubber Coated Washer) on to component B (Long Bolt) and ensure the metal part of component E (Rubber coated Washer) is facing downwards. 5. Thread on component F (Wing-Nut) on to component B (Long Bolt) and tighten until it is finger tight only. Step 2 1. Adjust component C (the Hinge Plates) and then fit the seat on to component C (the Hinge Plates) and push down to engage 2. Adjust the seat to fit the pan front and back. 3. With the seat now in the correct position, insert a screwdriver on to the bolt head to assist fully tightening component F (Wing-Nuts) and fully tighten component C (Hinge Plates) fixing seat into position. Step 3 1. After tightening lift seat into a not quite vertical position (75°) and lift off seat with a vertical pull. 2. Fit item 1 (Chrome Cover Pates) over the tightened hinge plates 3. Fit the seat back onto hinge plate pegs and secure by pushing the seat down to engage fully. Your Family Seat is now fitted ٨ ٨ Cleaning & Care Instructions To remove your seat at any time for cleaning 1. Lift your seat into a near vertical position and pull off. (See Step 3 above) 2. After cleaning, place seat back on the seat hinge pegs and push to refit the seat fully. 3. This seat is equipped with a slow close mechanism - DO NOT FORCE DOWN

CLEANING INSTRUCTIONS

CLEANING INSTRUCTIONS

Only use clean soapy water. The seat can be steam cleaned.

Do not use abrasive cleaning products or products containing chlorine or acids, as these may cause yellowing or peeling of the material. Use ONLY a mild detergent/non-abrasive household cleaner or neutral soap or natural household cleaning products, which are best for effective, problem-free cleaning. Do not use bleach or any products containing bleach on the seat. Do not mix cleaning products as this can cause a reaction. After cleaning, ensure the chrome hinge is dried. Leave the seat and lid up whenever strong cleaning products (such as bleach) are left in the pan bowl to prevent damage to the seat from the vapours.